


MORTICE LOCK & FURNITURE FITTING TEMPLATE

Print Actual Size A4

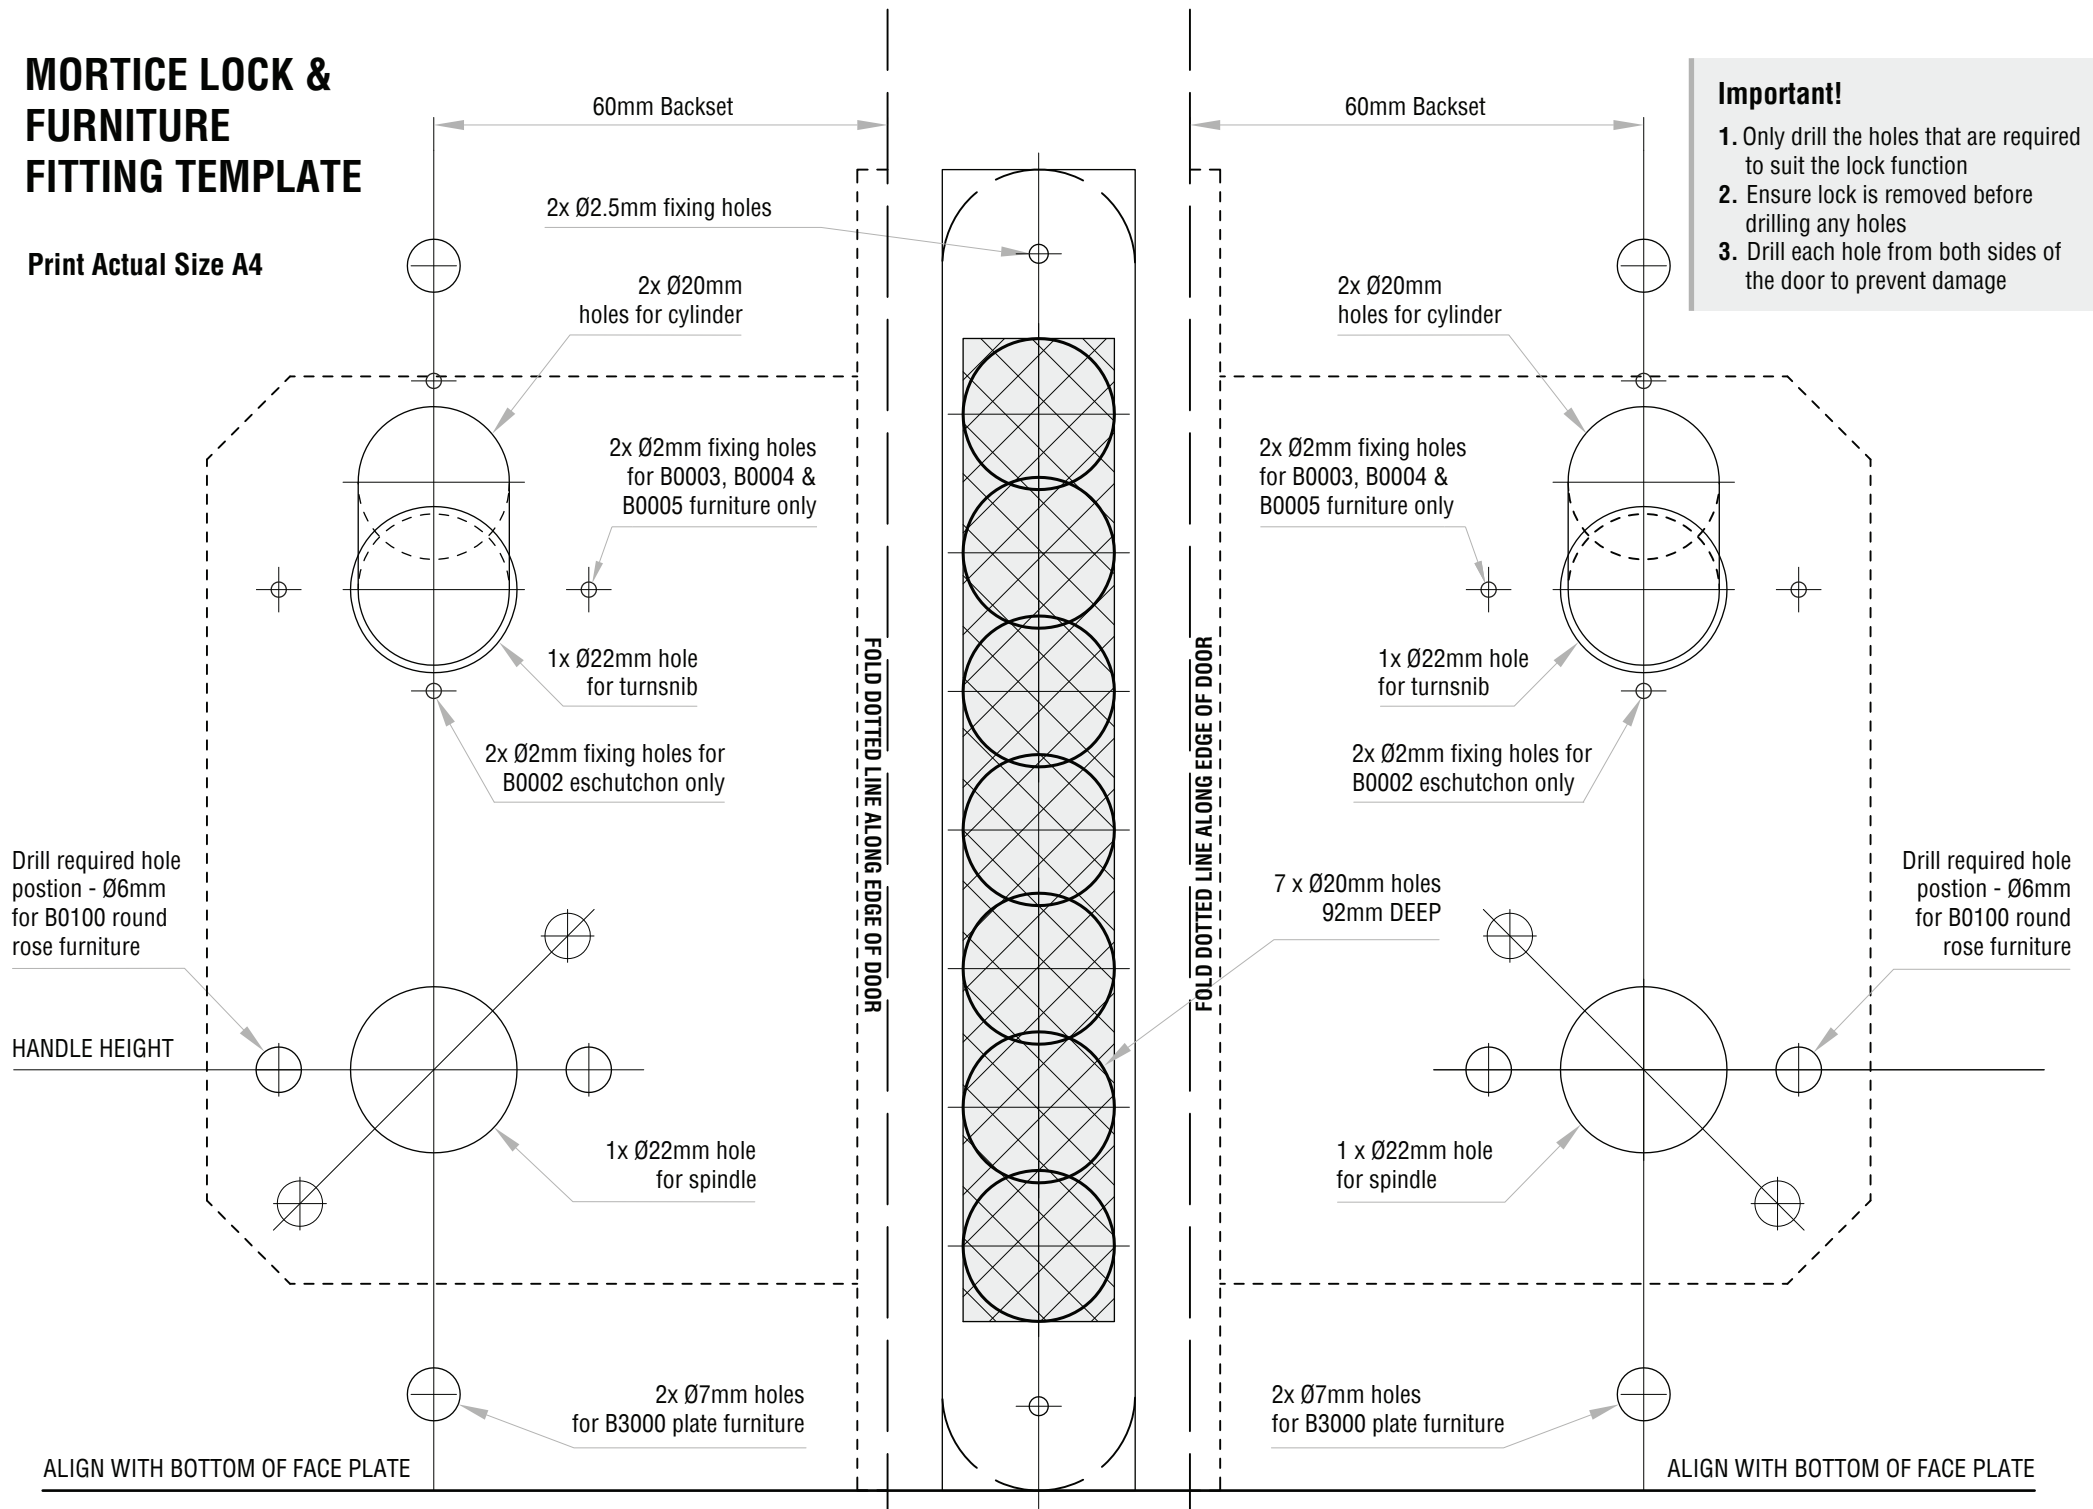

Important!

1. Only drill the holes that are required to suit the lock function
2. Ensure lock is removed before drilling any holes
3. Drill each hole from both sides of the door to prevent damage

FOLD DOTTED LINE ALONG EDGE OF DOOR

FOLD DOTTED LINE ALONG EDGE OF DOOR

ALIGN WITH BOTTOM OF FACE PLATE

ALIGN WITH BOTTOM OF FACE PLATE